

eBookMan®

EBM-900/901/911



Quick Start Guide

Franklin®
Electronic Publishers

www.franklin.com/ebookman

DO THIS FIRST...


Install the eBookMan® Desktop Manager on Your PC

1. Download and Install eBookMan Desktop Manager from http://www.franklin.com/ebookman/download_software.asp
2. Follow the instructions on the screen to install the program.

DO THIS SECOND...

Install Batteries in Your eBookMan Device


1. Push the tab on the battery cover, snap the battery cover open and lift it off.
2. Insert two AAA batteries following the +/- markings in the battery compartment.
3. Replace the battery cover. The unit powers on, and the tour begins.
4. Tap the introductory sentence in the language you want to view the tour.

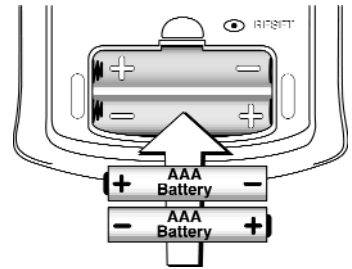


DO THIS THIRD...

Connect Your eBookMan Device to Your PC

1. Plug the cable or cradle into your PC.

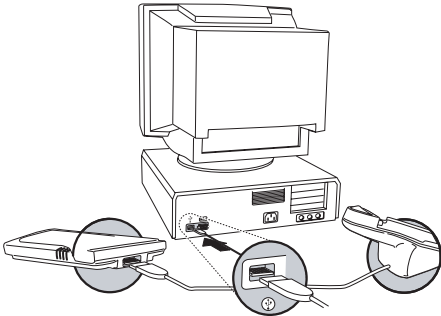


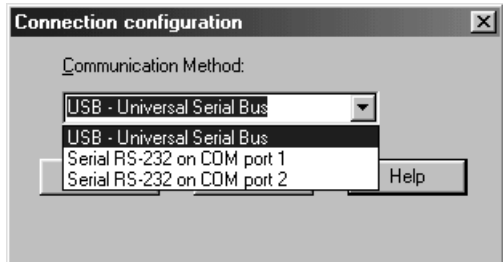
2. Connect eBookMan to the cable or cradle.

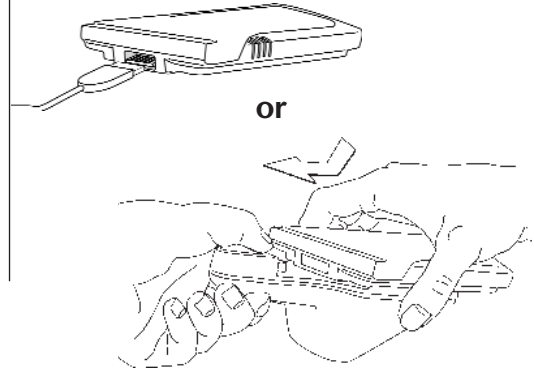

DO THIS FOURTH...


Start the Desktop Manager on Your PC

1. Open the Internet connection on your PC.
2. Turn your eBookMan device on.
3. Double click  on your PC Desktop to start the Desktop Manager. The Connection configuration dialog box appears.
4. Set the Connection Configuration.
 - A) Click the arrow to display the list of connections.
 - B) Select the port you want.
 - C) Click **OK** to save the changes.



IV START THE DESKTOP MANAGER ON YOUR PC


The following dialog box appears.

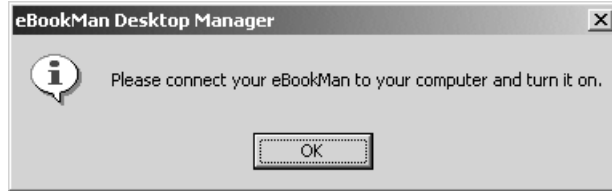


V DO THIS FIFTH. . .

Synchronize the eBookMan Operating System and Core Applications with Your eBookMan Device

1. Verify that your eBookMan is properly connected and turned on.
2. Click **OK** and follow the instructions in the series of dialog boxes that appear.

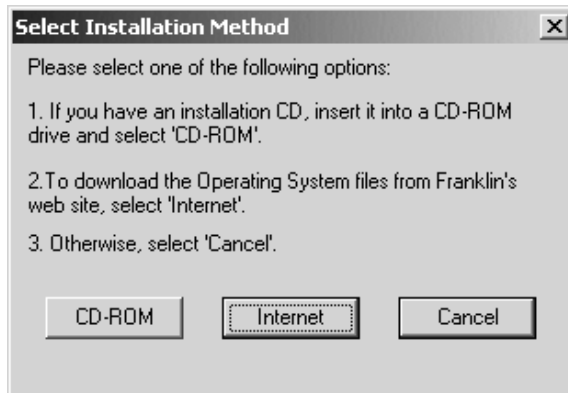


A) Click **INTERNET** to retrieve files from the Franklin website.

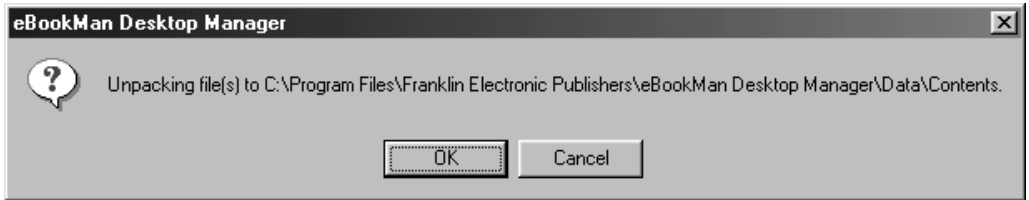


B) Click **OK** to unpack the eBookMan content.

The Desktop Manager connects to www.franklin.com and authenticates your eBookMan device.

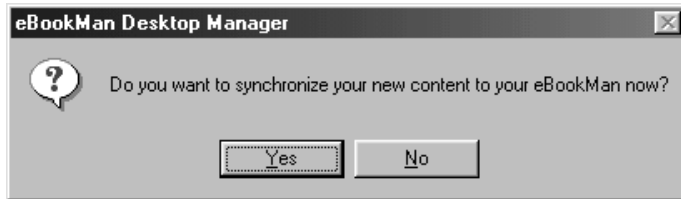


C) Click **Yes** to start synchronization.

If your eBookMan device requires a firmware update, a warning dialog box appears. Click **OK**.

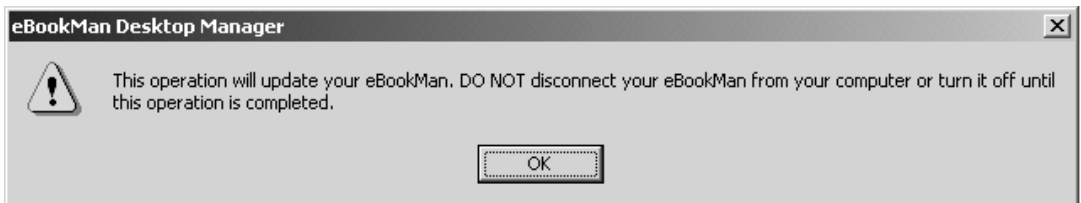

If no update is necessary, a status dialog box appears.

The Desktop Manager sends the OS and applications to eBookMan.

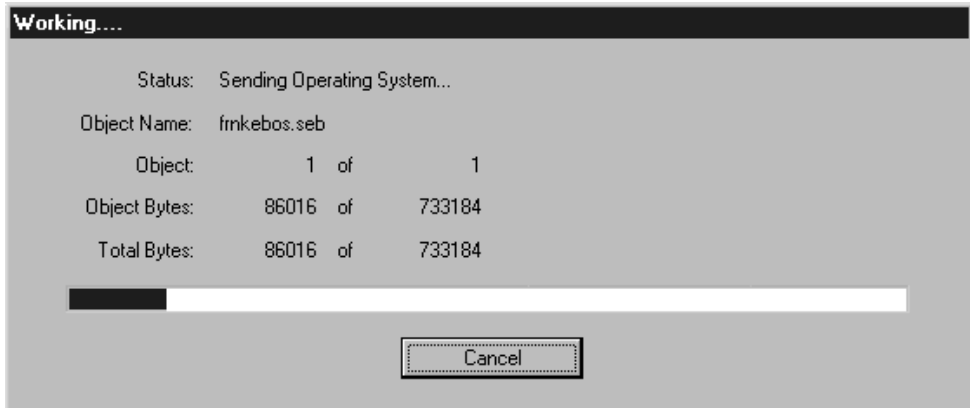






The status changes as the Desktop Manager installs the content onto eBookMan.

eBookMan turns off and on. The picture on your unit changes to indicate the eBookMan is connected to the Desktop Manager, and the Desktop Manager sends files to eBookMan.



D) Click **OK** when synchronization is successfully completed.

During synchronization, you may see these graphics on the eBookMan screen:


-  eBookMan is communicating with your PC.
-  eBookMan is busy.
-  eBookMan is connected to a PC, the Desktop Manager is running and detects eBookMan.
-  Synchronization is not complete.
-  eBookMan is connected to a PC but the Desktop Manager is not running.

VI

DO THIS SIXTH. . .

Calibrate Your eBookMan Device

1. Disconnect eBookMan from your PC.
The calibration screen appears after a few seconds.
2. Using the stylus, tap the intersection of the crosshairs to calibrate.
When the screen is calibrated, the message, "Please set the date and time" appears on the screen. Using the stylus, tap **OK**. The My eBookMan® screen appears.

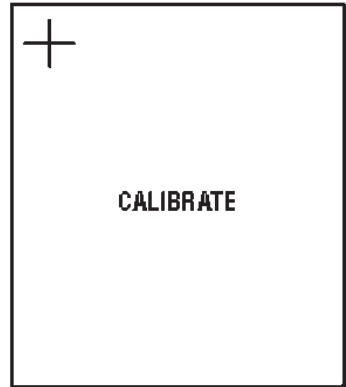


VII

DO THIS SEVENTH. . .

Set the Date and Time on Your eBookMan Device

1. Tap **01/01/01** next to Select Date.
The Select Date screen appears.
2. Tap **1** or **2** to select the year.
3. Tap the month and day.
4. Tap **Select** to save changes and return to *My eBookMan*®.
5. Tap **12** and **00** next to Select Time to change the hour and minute.
6. Tap **PM** to toggle between AM and PM.
7. Tap **Done** to go to the Launcher.

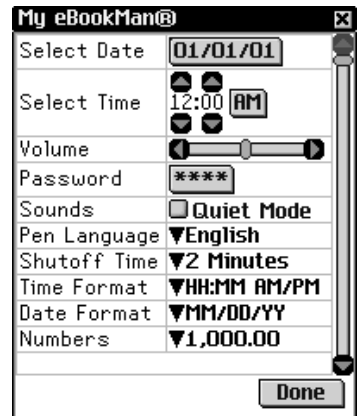

For more information about the eBookMan device and the eBookMan Desktop Manager with Intellisync™ for eBookMan to use with Microsoft® Outlook®, please see the *eBookMan User's Guide*®. The concise manual is included in the box. Click View User's Guide from the Franklin eBookMan Setup screen to see the PDF version.

Register Your eBookMan

The Desktop Manager enables you to register your device through the Internet. You must register to download any free content that comes with your eBookMan. You also can get samples of ebooks, music and audiobooks. To register from the Desktop Manager, follow these steps.

1. Open your Internet connection on your PC.
2. Connect eBookMan to your PC.
3. Turn on your eBookMan device.
4. Start the Desktop Manager.
5. Click Web Register.
6. Follow the instructions on the screen to create a Franklin account, register and download content.

Note: Always write your password down and keep it in a safe place. You must enter your password each time you visit your Library of titles and content at Franklin's Web site.

Franklin[®]
Electronic Publishers

www.franklin.com/ebookman